

## LOAD VUESCAN





## FOR COOLSCAN 8000:

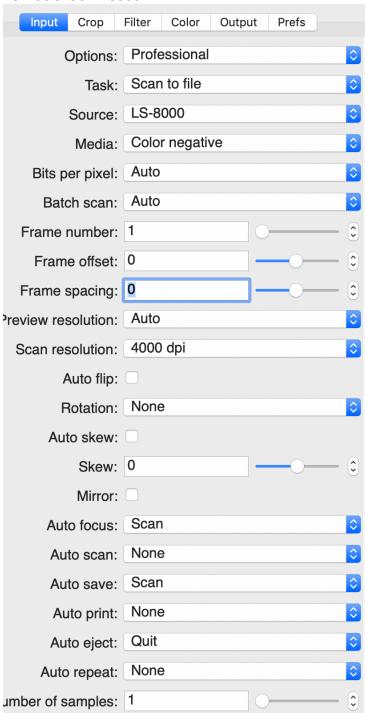

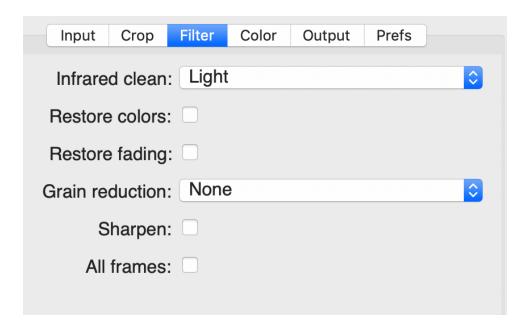

## FOR COLOR NEGATIVES

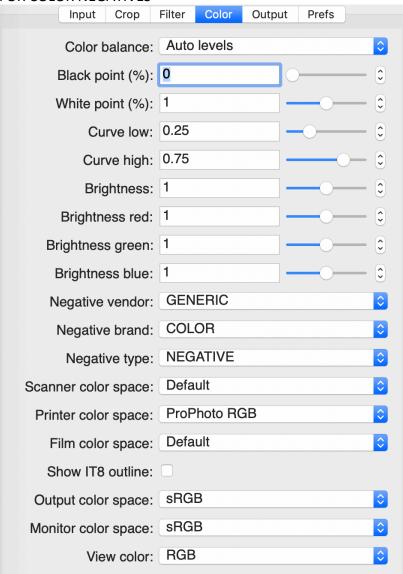

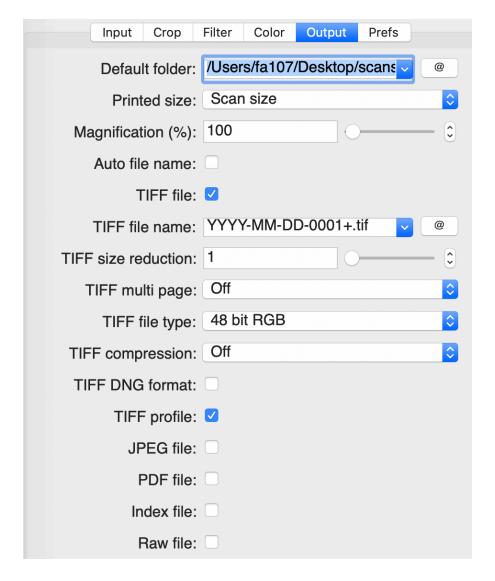

FOR 2<sup>ND</sup> OR 3<sup>RD</sup> FRAMES ON YOUR FILM – YOU WILL HAVE TO ADJUST FRAME OFFSET AND RE-PREVIEW UNTIL IT IS CORRECT – FRAME OFFSET CAN BE A POSITIVE OR NEGATIVE NUMBER

